

FREEDOM BUOY Assembly and Instructions



USE NON-CHLORINE BLEACH AS NEEDED



DO NOT MACHINE DRY



WARNING:

**CHOKING HAZARD – Small Parts
Not for Children under 3 years old.**



**Use with adult supervision only!
This is NOT a lifesaving device!**



HAND WASH



DO NOT IRON

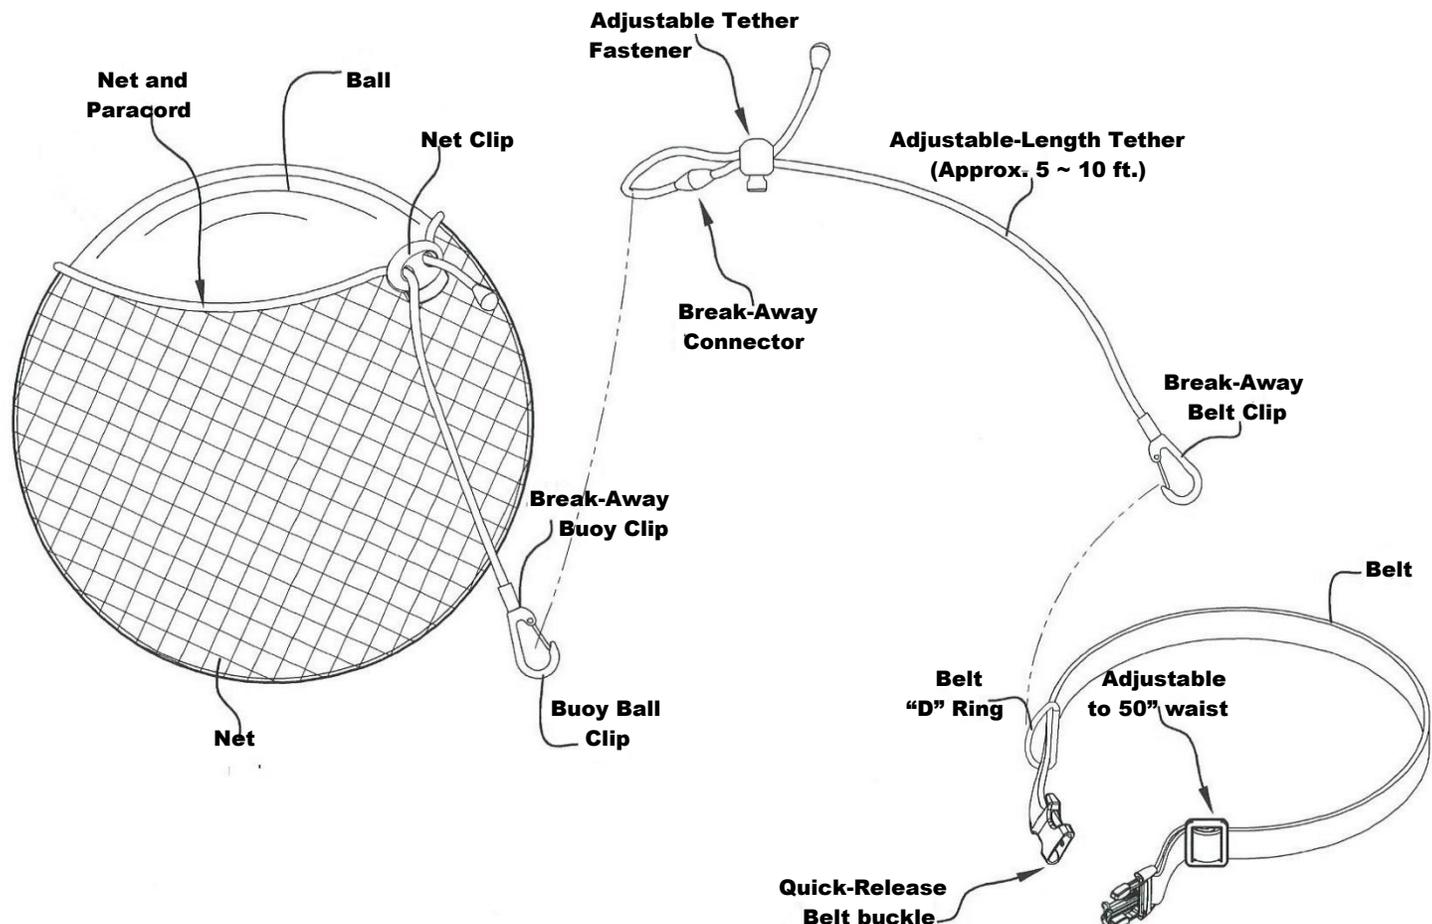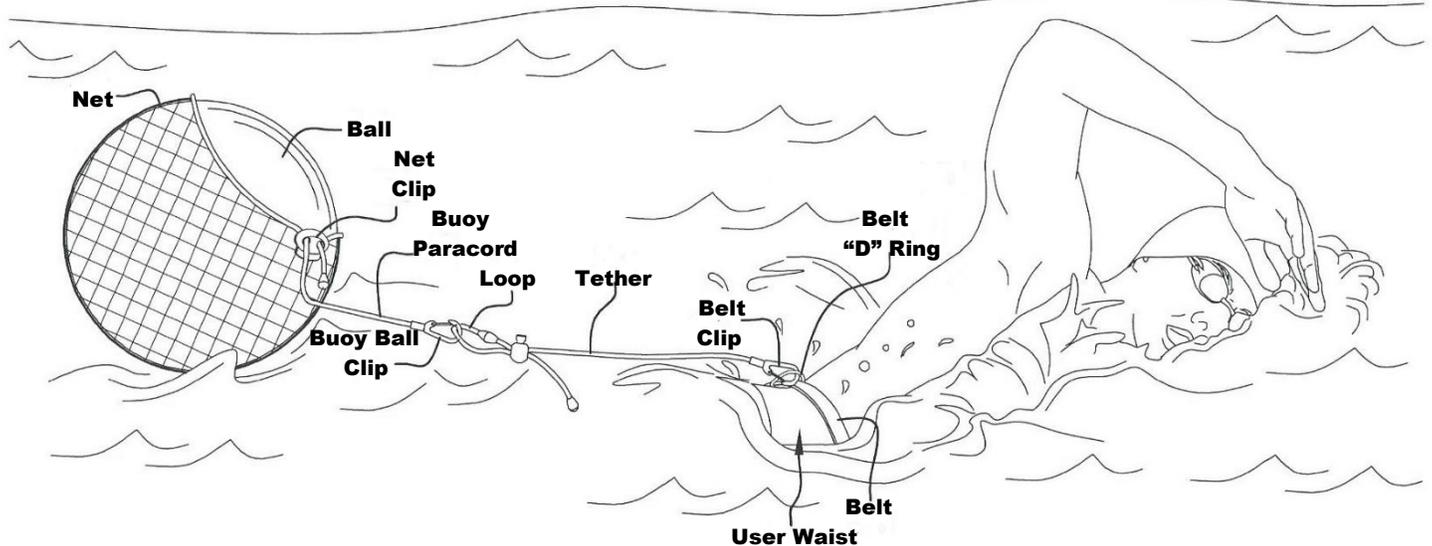



The Freedom Buoy pouch contains spare parts*.

***NOT INTENDED FOR SMALL CHILDREN**

The Freedom Buoy pouch can be used to store valuables


1.	Place the water-proof valuables inside the pouch
2.	Pull the two pouch drawstrings tight
3.	Attach it to the net/paracord using the black clips
4.	Swim normally. The pouch will be under water.

FREEDOM “DIVER” BUOY Instructions

NOTE: The legal “Diver” flag size varies by State. Prior to purchase, consult your local Department of Natural Resources for details.

The Diver Flag can be attached to the Freedom Buoy by various methods (see illustrations):

Use a dowel rod as a flag pole and attach it directly to the net using the 2 black hooks

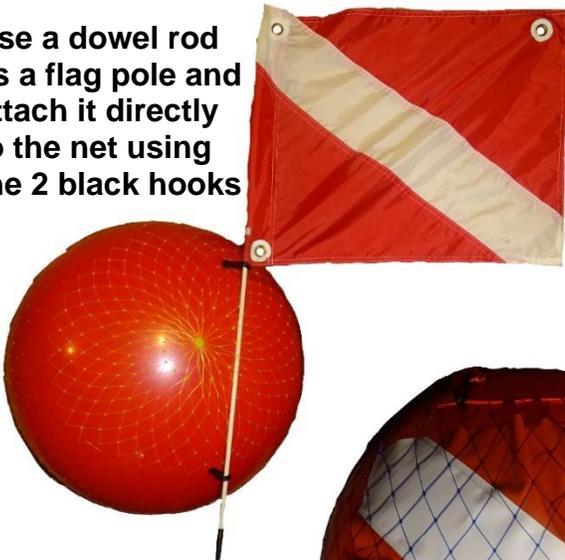

Attach the flag directly to the net using the two black hooks.



Check with your local DNR for consent.

Prior to fully inflating the Freedom Buoy, place the flag inside the net. Position the flag so it is upright and displayed correctly when the buoy is fully inflated.



NOTE: The pouch can be used as a counter-weight by filling it with enough personal items to keep the flag upright in heavy wind or waves.

By law, any vessel must maintain a distance of at least 100 feet from any diver’s flag. The minimum flag size is 12 inches by 12 inches on a buoy towed by a swimmer.

The Freedom “DIVER” Buoy allows you to swim freely anywhere without a spotter.

WWW.FREEDOMBUOY.COM